

How to Fix a Flat

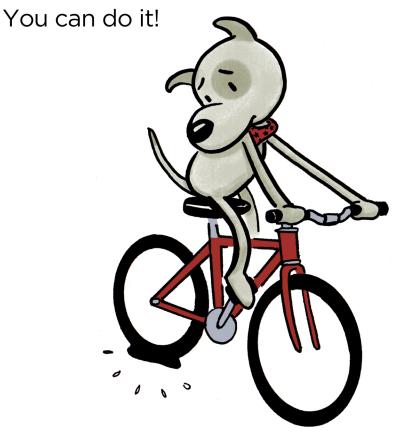


 


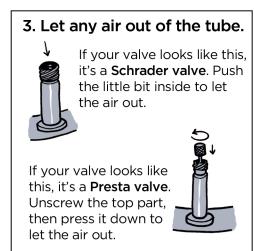

to get the wheel off.



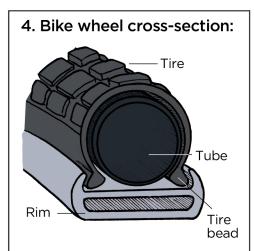







Hook the lever under the tire bead closest to you. Try not to pinch the tube with the levers.

6. Push lever handle down.

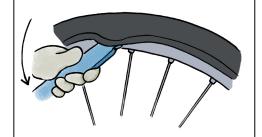

Your tire might be on there pretty tight! Use leverage between the lever and the rim.

7. Hook lever around spoke.

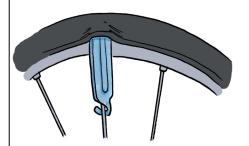

That will hold it in place while you insert a second lever and repeat steps 6 and 7.

8. Push the two levers apart.



Work the levers around the rim until you've completely removed the tire from one side of the rim.