



1. Drop bars with wedge stems...

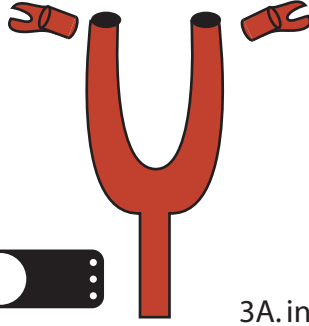

2. ...inserted into BMX/MTN forks with dropouts cut off

3B. Alternatively, use a threadless stem on steerer tube to hold stand on a horizontal bar/rail/etc.

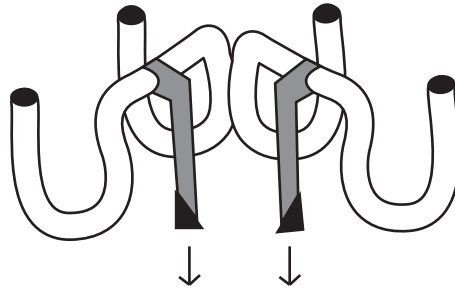

3A. insert and weld or bolt fork steerer tube into section of frame top tube.

(Top tube segment length determines working height of repair stand.)



4. insert and weld or bolt fork steerer tube into section of frame top tube.



5. BMX bars with wedge stems inserted into BMX/MTN forks with dropouts cut off

